

Telephone:
Fax:
VAT Registration No.:

System operation

- Pressing lock button activates central locking and alarm (if fitted).
- Pressing unlock button deactivates alarm and central locking (if fitted).
- Vehicles with double locking:
 - Pressing lock button again within 5 seconds of locking vehicle activates double locking system.
 - Pressing unlock button deactivates double locking system and alarm (if fitted).
- If vehicle unlocked and doors or tailgate not opened within 30 seconds, locks/alarm are reactivated.
- There is an emergency key inserted in the remote control.

Programming

When

- Remote control added or replaced.
- System malfunction.

How

- Driver's door open and remote control removed from ignition slot.
- Within 5 seconds:
 - Insert and remove the remote control from the ignition slot twice.
- Within 40 seconds:
 - Close and open driver's door twice.
 - Insert and remove the remote control from the ignition slot.
- Within 40 seconds:
 - Close and open driver's door twice.
 - Insert the remote control into the ignition slot and close the driver's door.
- Within 40 seconds:

NOTE: AT: DO NOT depress brake pedal whilst carrying out the following operation. MT: DO NOT depress clutch pedal whilst carrying out the following operation.

- Press POWER button to switch ignition ON (amber LED illuminated) and OFF once to program a new remote control code whilst retaining the original codes, twice to program a new remote control code whilst erasing the original codes, three times to check how many remote controls are currently programmed or five times to erase all programmed codes.
- Remove remote control from ignition slot.
- Within 5 seconds:
 - System should now lock and unlock vehicle once, twice or five times depending which mode has been selected. If check mode selected, system should lock and unlock vehicle one to four times, slowly, to indicate number of keys programmed.
- Within 40 seconds:
 - Simultaneously press lock and unlock buttons.
 - Press lock or unlock button.
- Within 5 seconds:
 - System should now lock and unlock vehicle once to confirm programming, twice to indicate programming has failed.
- Within 40 seconds:
 - Repeat button procedure to program remaining remote controls.

NOTE: To exit programming mode: Open driver's door.

NOTE: A maximum of 4 remote controls can be programmed.

1

