


REMOVE HEADLIGHT LIGHT CONTROL ECU SUB-ASSEMBLY LH

Turn the headlight light control ECU sub-assembly LH in the direction indicated by the arrow in the illustration to separate the headlight light control ECU sub-assembly LH from the headlight unit.

Note

Do not apply excessive force using a tool.


Do not damage the headlight gasket or allow it to become contaminated with foreign matter. If the headlight gasket is damaged or contaminated, water may get into the headlight assembly, resulting in a malfunction of the headlight light control ECU sub-assembly LH.

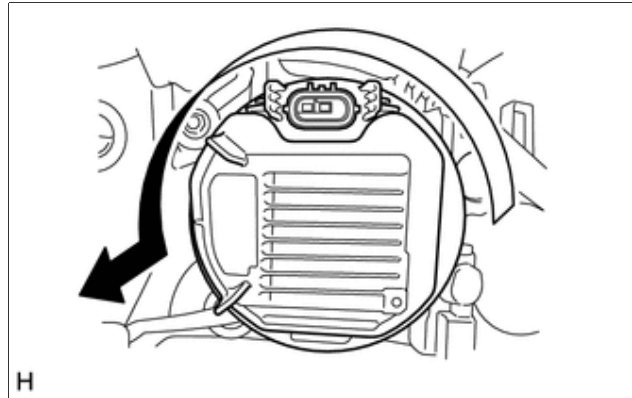

Turn the headlight light control ECU sub-assembly socket in the direction indicated by the arrow in the illustration to remove the headlight light control ECU sub-assembly LH.


CAUTION:

Do not pull the headlight light control ECU sub-assembly LH with the socket connected.

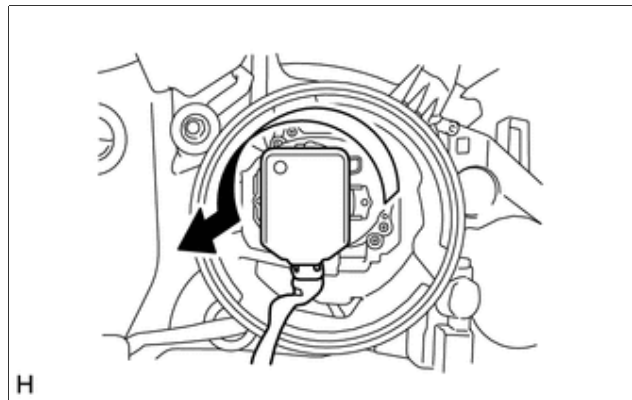

REMOVE HEADLIGHT GASKET

Remove the headlight gasket from the headlight light control ECU sub-assembly LH.

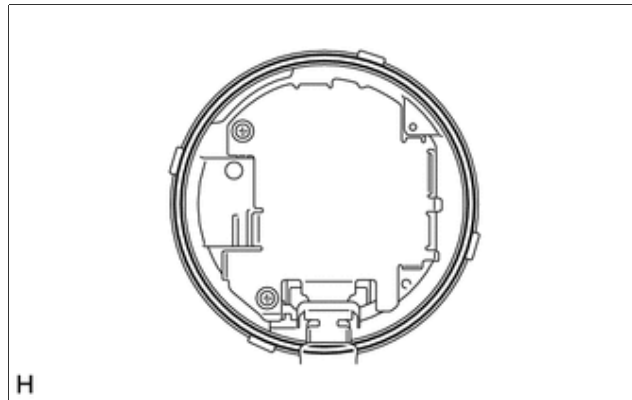


REMOVE DISCHARGE HEADLIGHT BULB

Release the set spring lock in the order shown in the illustration and remove the discharge headlight bulb.


Note

Do not touch the discharge headlight bulb glass.

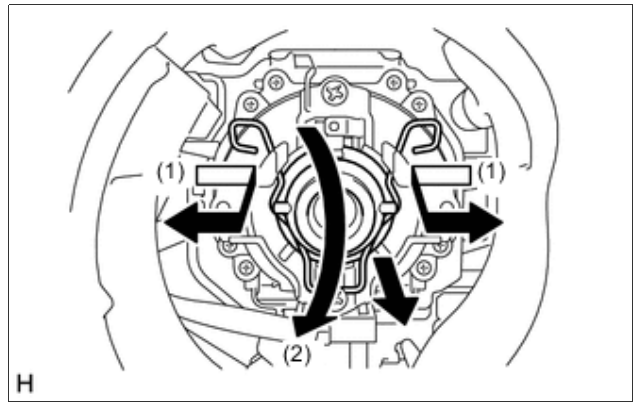


REMOVE FRONT TURN SIGNAL LIGHT SOCKET

Turn the front turn signal light socket in the direction indicated by the arrow to remove it.

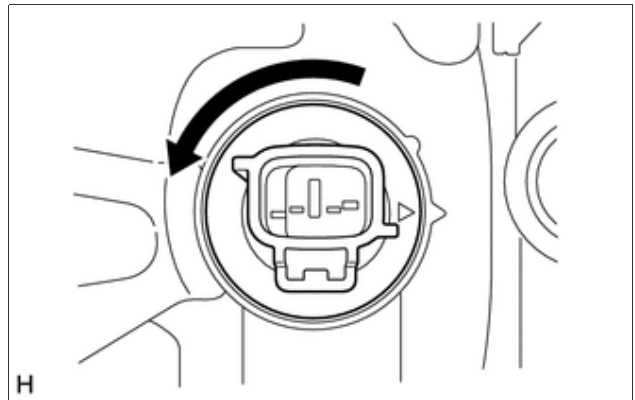


REMOVE FRONT TURN SIGNAL LIGHT BULB

Remove the front turn signal light bulb from the front turn signal light socket.

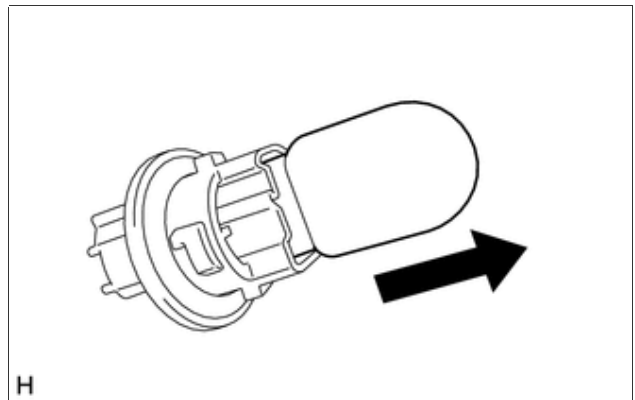


INSTALL FRONT TURN SIGNAL LIGHT BULB

Install the front turn signal light bulb to the front turn signal light socket.

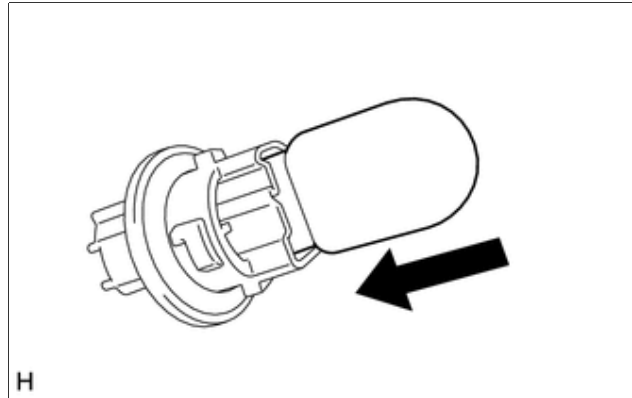

INSTALL FRONT TURN SIGNAL LIGHT SOCKET

Turn the front turn signal light socket in the direction indicated by the arrow to install it.

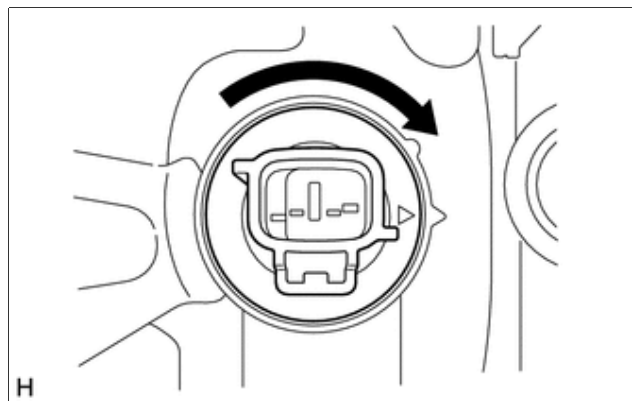


INSTALL DISCHARGE HEADLIGHT BULB

Set the discharge headlight bulb to the headlight unit.

Lock the set spring in the order shown in the illustration to install the discharge headlight bulb to the headlight unit.

Note

Do not touch the discharge headlight bulb glass.

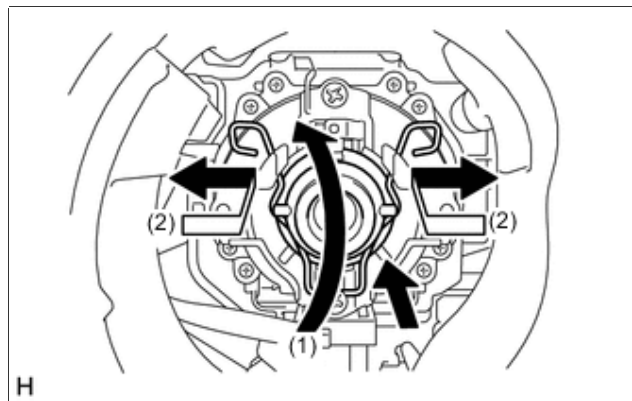

INSTALL HEADLIGHT GASKET

Install a new headlight gasket to the headlight light control ECU sub-assembly.

INSTALL HEADLIGHT LIGHT CONTROL ECU SUB-ASSEMBLY LH

Turn the headlight light control ECU sub-assembly socket in the direction indicated by the arrow in the illustration to connect the headlight light control ECU sub-assembly socket.

Note

Check that the headlight gasket is installed on the headlight light control ECU subassembly LH.

Check that the headlight gasket is not damaged or contaminated with foreign matter. If there is any damage, replace the headlight gasket with a new one.

Do not pull the headlight light control ECU sub-assembly LH with the socket connected.

Turn the headlight light control ECU sub-assembly LH in the direction indicated by the arrow in the illustration to install the headlight light control ECU sub-assembly LH to the headlight unit.

