

WIPER / WASHER WASHER MOTOR(for TMC Made) INSPECTION**PROCEDURE****1.INSPECT WINDSHIELD WASHER MOTOR AND PUMP ASSEMBLY**

 
85310

HINT:

This check should be performed with the windshield washer motor and pump assembly installed to the washer jar.

a. for Front Washer:**i.**

*a



*a

Component without harness connected
(Windshield Washer Motor and Pump
Assembly)

Fill the washer jar with washer fluid.


ii. Apply auxiliary battery voltage to the windshield washer motor and pump assembly and check that the washer fluid flows from the washer jar.**OK:**

Condition	Specified Condition
Auxiliary battery positive (+) → Terminal 1	Washer fluid flows from the washer jar
Auxiliary battery negative (-) → Terminal 2	

If the result is not as specified, replace the windshield washer motor and pump assembly.

b. for Rear Washer:**i.**

 *a



*a

Component without harness connected
(Windshield Washer Motor and Pump
Assembly)

Fill the washer jar with washer fluid.

ii. Apply auxiliary battery voltage to the windshield washer motor and pump assembly and check that the washer fluid flows from the washer jar.**OK:**

Condition	Specified Condition
Auxiliary battery positive (+) → Terminal 2	Washer fluid flows from the washer jar
Auxiliary battery negative (-) → Terminal 1	

If the result is not as specified, replace the windshield washer motor and pump assembly.