

STEERING WHEEL INSTALLATION



(../ppr/ppr_rm0000033rr018x.xml#rm0000033rr018x.xml)

INSTALL TRANSMISSION SHIFT SWITCH ASSEMBLY (w/ Shift Paddle Switch)

Install the 2 shift paddle switches and 2 brackets with the 4 screws.

Torque:


1.7 N*m { 17 kgf*cm, 15 in.*lbf }

CAUTION:


Make sure that the brackets are securely installed.

Text in Illustration

*1	Shift Paddle Switch
*2	Bracket

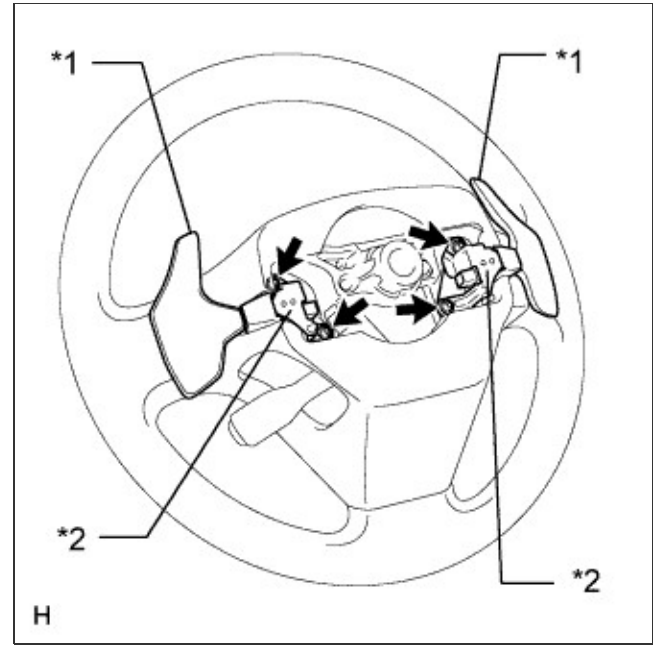

Connect the 2 switch wire connectors to the shift paddle switches.

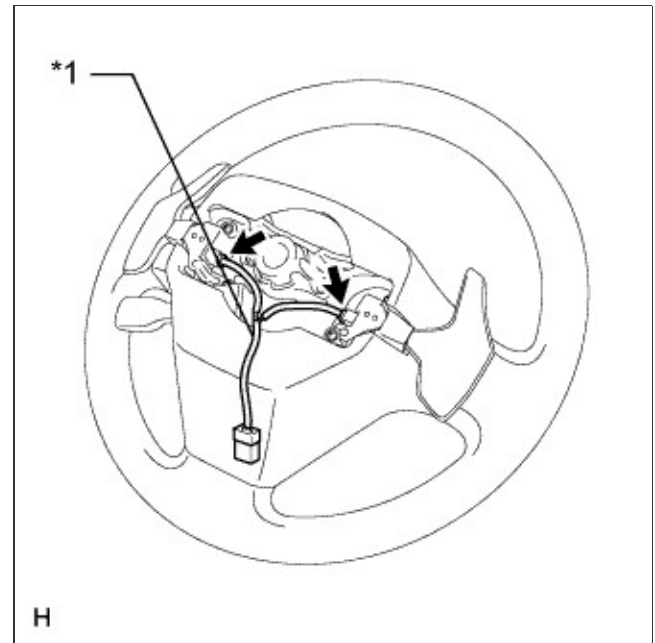


Text in Illustration

*1	Switch Wire
----	-------------

Install the connector to the steering wheel assembly.

Install the clamp to the steering wheel assembly.

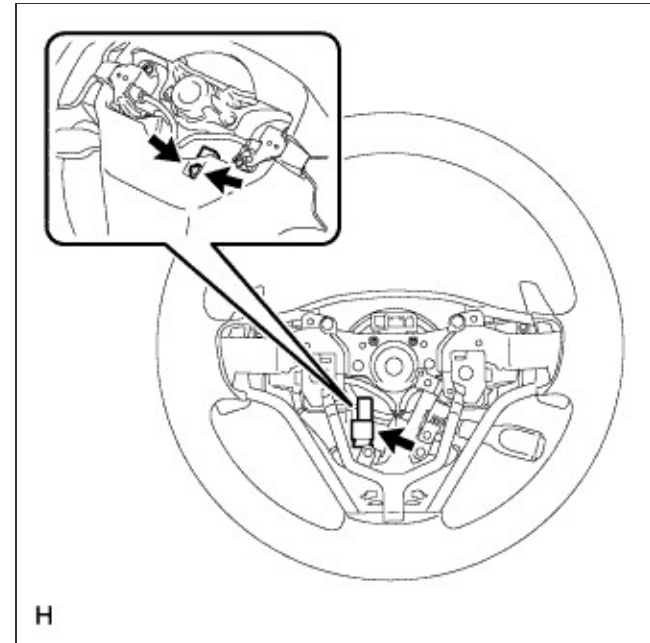


INSTALL STEERING SHAKE DAMPER

Install the steering shake damper with the 2 screws.

Torque:

2.4 N*m { 24 kgf*cm, 21 in.*lbf }

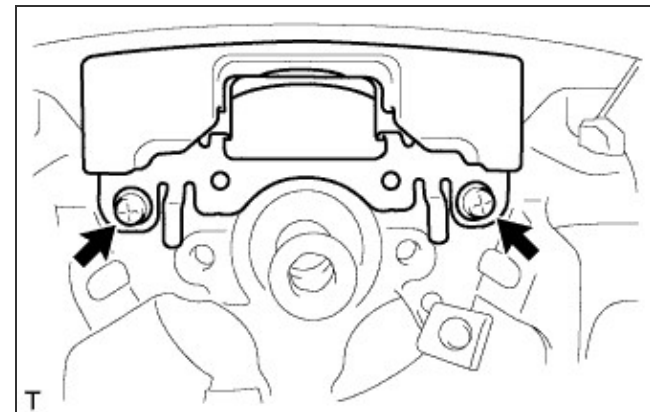

INSTALL STEERING PAD SWITCH ASSEMBLY


Attach the 2 claws and 4 pins to install the steering pad switch.

Install the 2 screws.

Torque:

2.4 N*m { 24 kgf*cm, 21 in.*lbf }

Connect the connector.

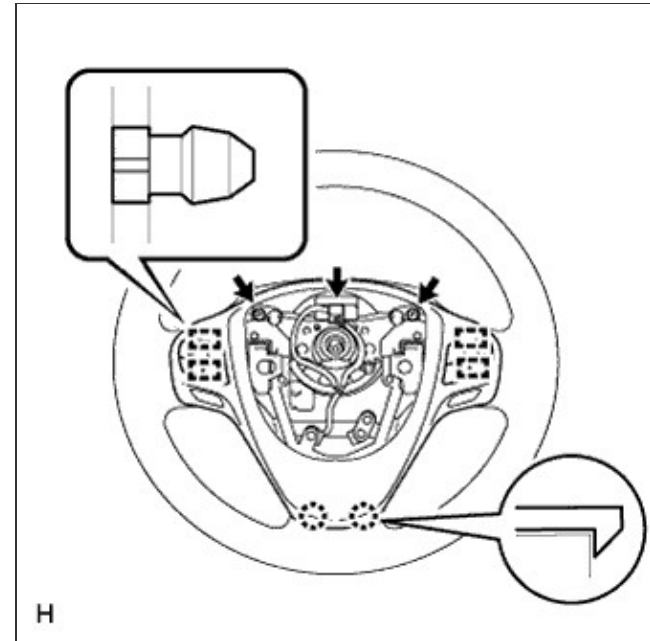


INSTALL CRUISE CONTROL SWITCH WIRE (w/ Cruise Control System)

INSTALL CRUISE CONTROL MAIN SWITCH (w/ Cruise Control System)

Install the switch with the 2 screws.

Connect the connector.

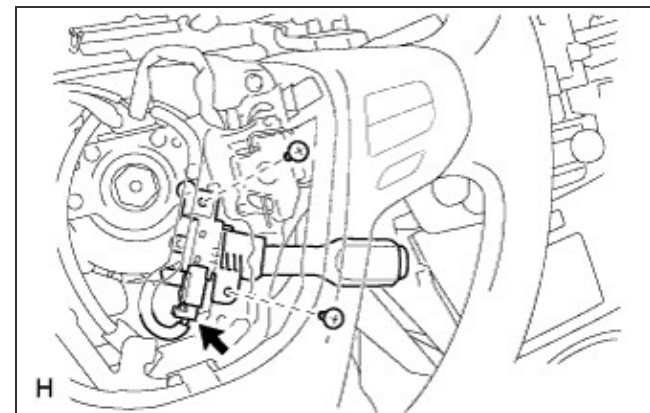

PLACE FRONT WHEELS FACING STRAIGHT AHEAD

ADJUST SPIRAL CABLE

Check that the ignition switch is off.

Check that the cable is disconnected from the negative (-) battery terminal.


CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

Rotate the spiral cable counterclockwise slowly by hand until it feels firm.

CAUTION:

Do not turn the spiral cable by the airbag wire harness.

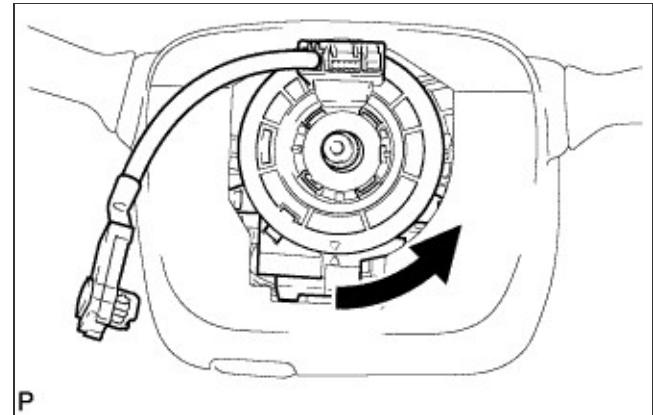


Rotate the spiral cable clockwise approximately 2.5 turns to align the marks.

CAUTION:

Do not turn the spiral cable by the airbag wire harness.

Tech Tips

The spiral cable will rotate approximately 2.5 turns to both the left and right from the center.

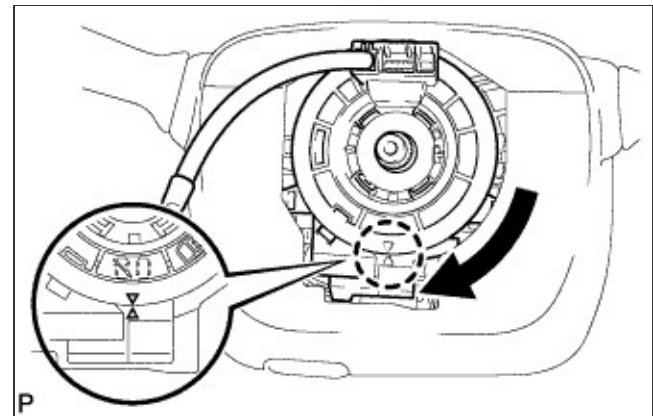

INSTALL STEERING WHEEL ASSEMBLY

Align the matchmarks on the steering wheel assembly and steering main shaft.

Install the steering wheel assembly set nut.


Torque:

50 N*m { 510 kgf*cm, 37 ft.*lbf }

Connect the connectors to the spiral cable sub-assembly.

Text in Illustration

*1

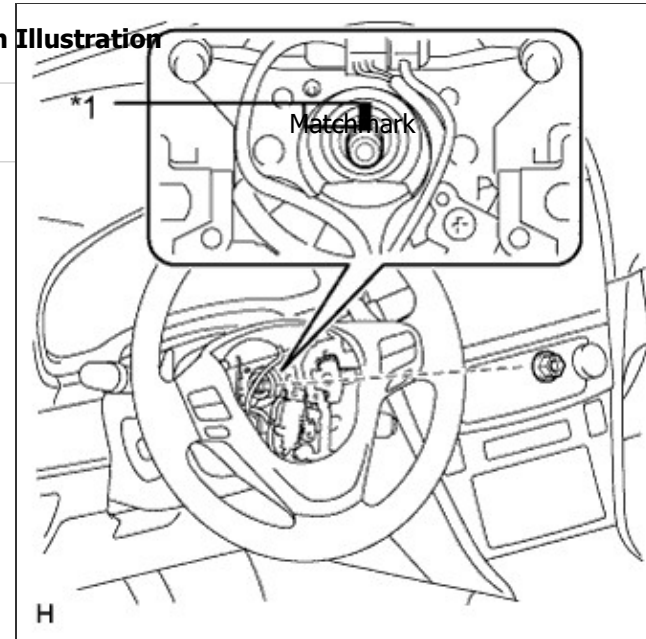

INSTALL STEERING PAD

Support the steering pad with one hand.


Connect the connector to the steering pad.

Note

When handling the airbag connector, take care not to damage the airbag wire harness.


Connect the horn connector.

Attach the 2 springs to install the steering pad.

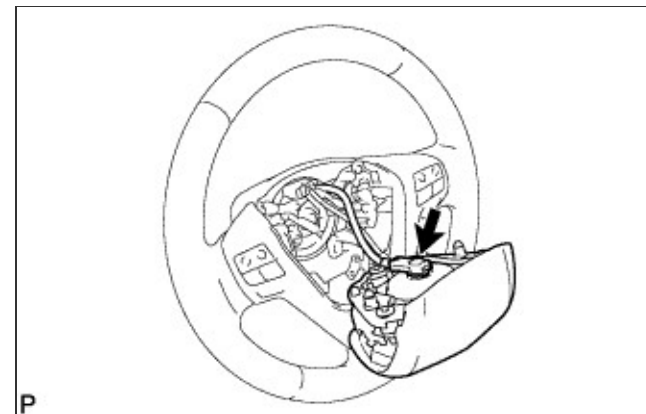

INSTALL LOWER NO. 3 STEERING WHEEL COVER

Attach the 2 claws to install the steering wheel cover.

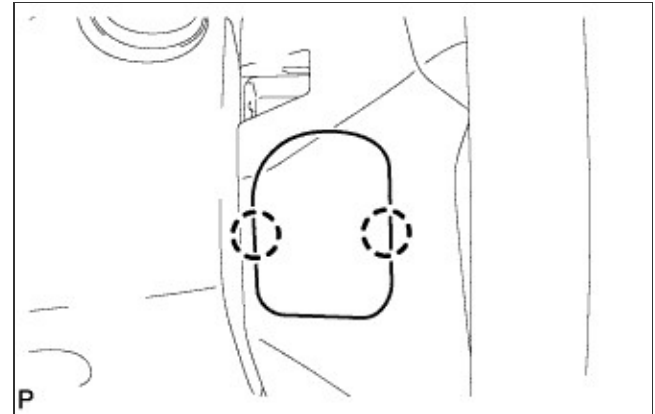


INSTALL LOWER NO. 2 STEERING WHEEL COVER

Attach the 2 claws to install the steering wheel cover.

Text in Illustration

*1	w/o Cruise Control System
*2	w/ Cruise Control System

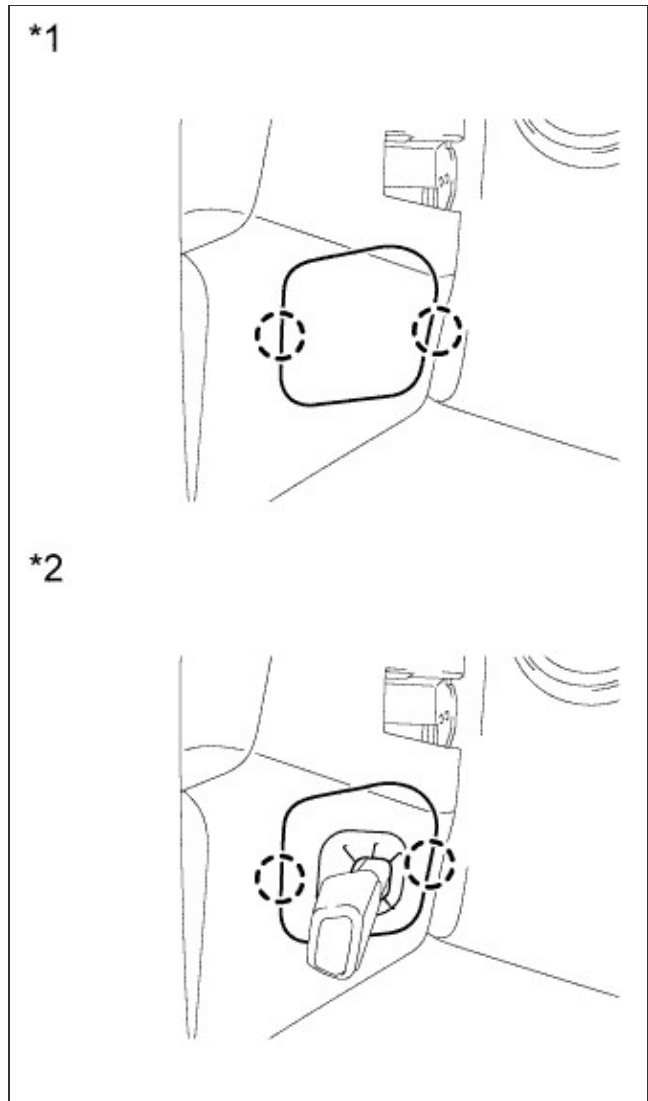

INSPECT STEERING WHEEL CENTER POINT

CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

Note

When disconnecting the cable, some systems need to be initialized after the cable is reconnected [Click here](#)

(RM000003VS4000X.xml#RM000003VS4000X).

INSPECT SRS WARNING LIGHT

Inspect the SRS warning light [Click here](#) (RM000000XFD06YX.xml#RM000000XFD06YX).