

REAR BUMPER(for Wagon) REMOVAL

PROCEDURE

1. REMOVE REAR COMBINATION LIGHT ASSEMBLY LH

[Click here](#)

2. REMOVE REAR COMBINATION LIGHT ASSEMBLY RH


[Click here](#)

3. REMOVE REAR BUMPER COVER


a. Remove the clip.

Tech Tips

Use the same procedure for the other side.

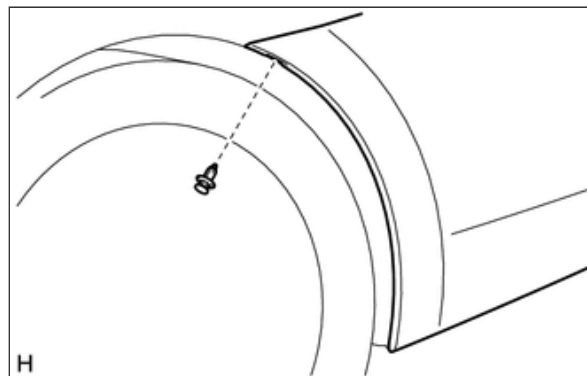

b. Remove the 8 clips.

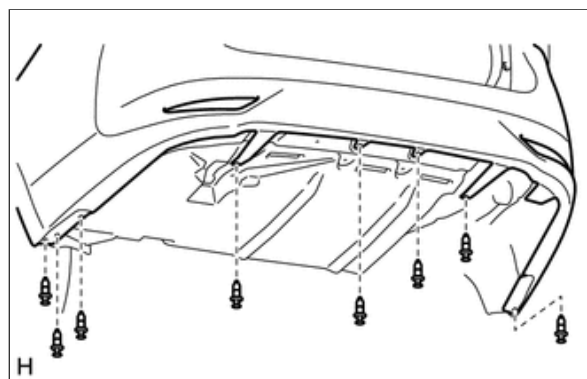

c. Remove the screw.


Tech Tips

Use the same procedure for the other side.


d. Detach the claw and remove the rear bumper upper stopper.

Tech Tips

Use the same procedure for the other side.

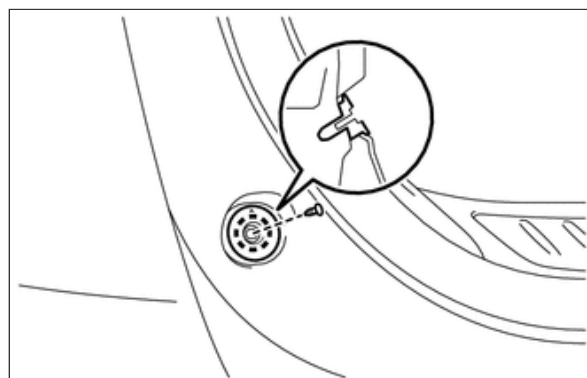


e. Put protective tape around the rear bumper cover.

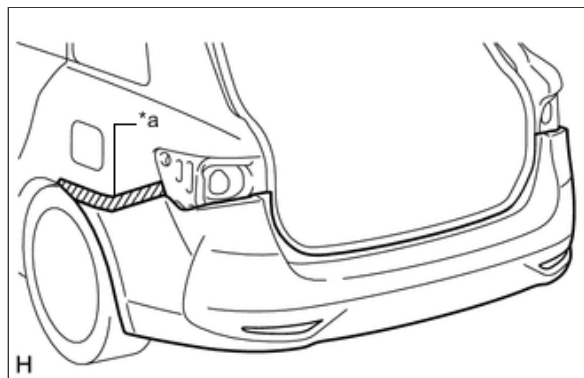

Text in Illustration

*a	Protective Tape
----	-----------------

f. Remove the 2 screws.

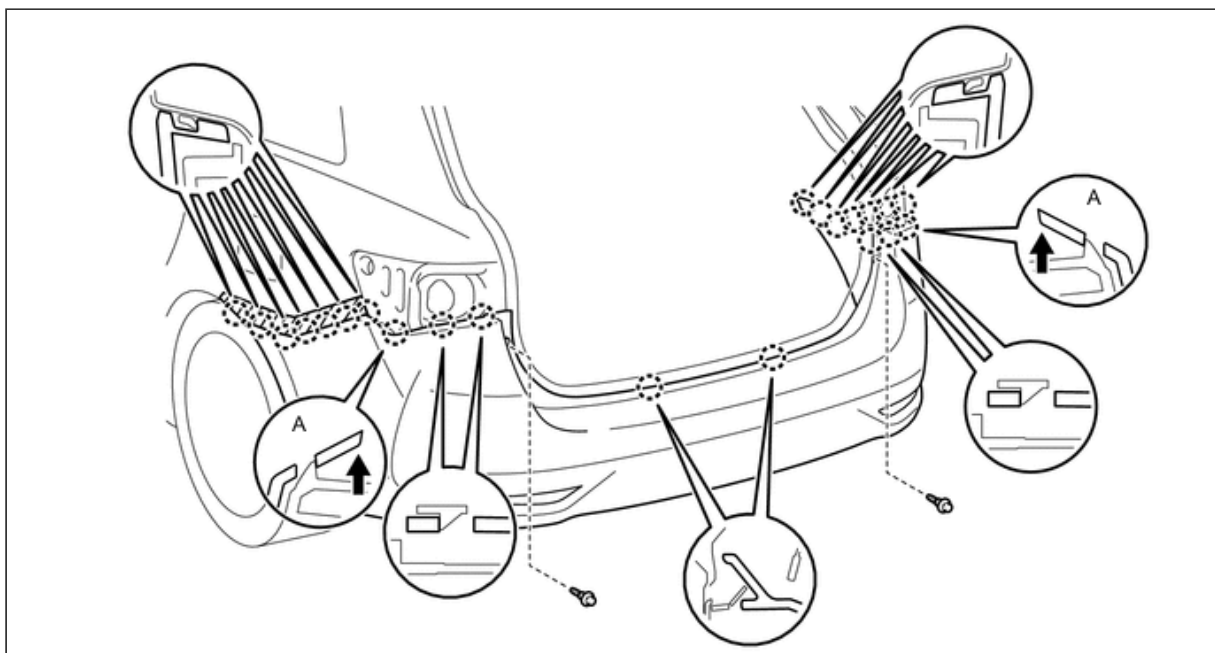

g. Detach the 22 claws and remove the rear bumper cover.


Tech Tips

Pull up the claws labeled A in the illustration.

h. Remove the protective tape.


4. REMOVE REAR BUMPER NO. 1 REINFORCEMENT

a. Remove the 8 bolts and rear bumper No. 1 reinforcement.

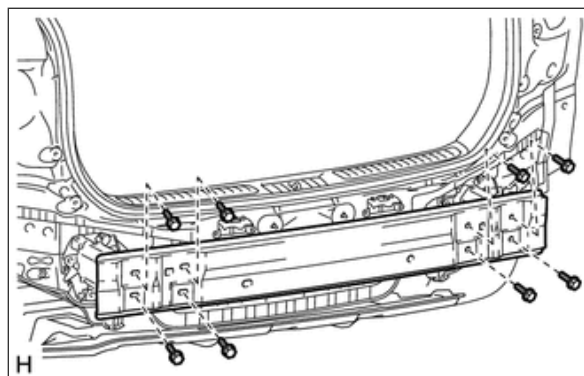

5. REMOVE REAR BUMPER ARM SUB-ASSEMBLY LH

a. Remove the 3 bolts and rear bumper arm sub-assembly LH.

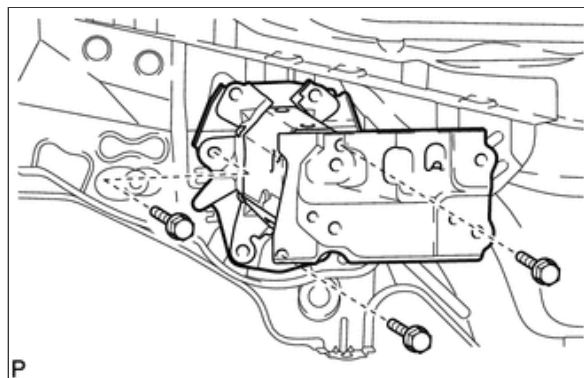


6. REMOVE REAR BUMPER ARM SUB-ASSEMBLY RH

Tech Tips

Use the same procedure described for the LH side.

7. REMOVE REAR BUMPER SIDE RETAINER LH

- Remove the rear bumper bracket.
- Remove the 2 screws.
- Detach the 3 claws and remove the rear bumper side retainer LH.

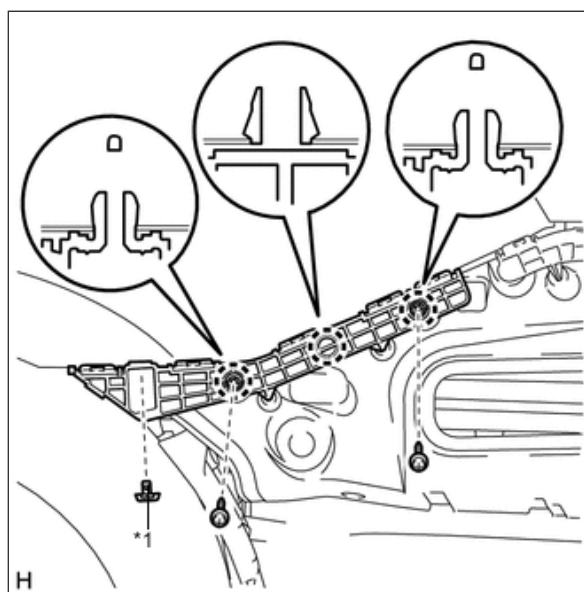

Text in Illustration

*1	Rear Bumper Bracket
----	---------------------


8. REMOVE REAR BUMPER SIDE RETAINER RH

Tech Tips

Use the same procedure described for the LH side.

9. REMOVE REAR BUMPER NO. 2 SIDE RETAINER LH

- Remove the 2 screws.
- Detach the 3 claws and remove the rear bumper No. 2 side retainer LH.

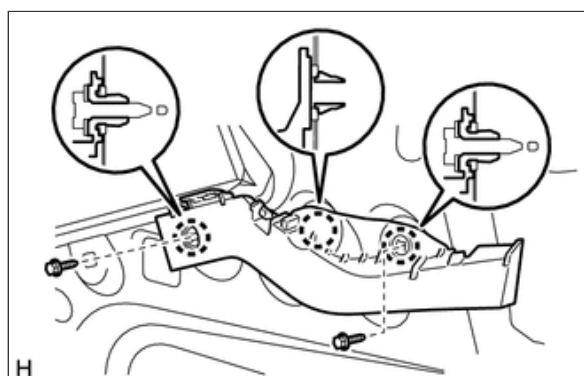


10. REMOVE REAR BUMPER NO. 2 SIDE RETAINER RH

Tech Tips

Use the same procedure described for the LH side.

11. REMOVE REAR BUMPER UPPER RETAINER LH

- a. Remove the screw.
- b. Detach the 2 claws and remove the rear bumper upper retainer LH.

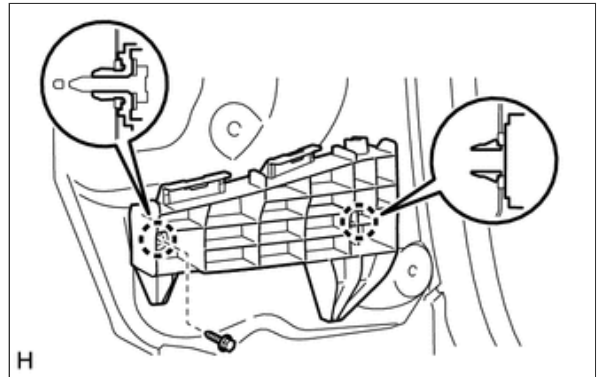**12. REMOVE REAR BUMPER UPPER RETAINER RH****Tech Tips**

Use the same procedure described for the LH side.